
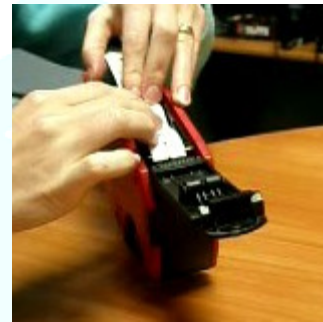


# Jolly Operation Manual

## To Load The Label Roll

1. To open the label roll holder, pull upwards using the hole provided.
2. To open the base plate, pull down using rounded end of base plate.
3. Open the inner base plate. Insert the label roll into the holder. Slide the labels through the machine with the labels facing upwards. Close the label roll holder.
4. Pull the labels through the machine about 10cm. Lay them over the sprocket so the holes in the label match the cog. Close the inner base plate and then the outer base plate, keeping the labels central.

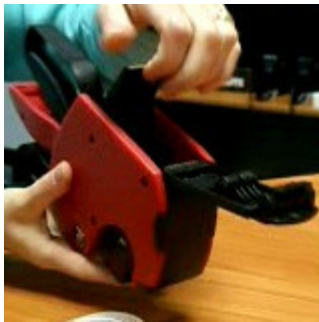

## Print Setting


Move the arrow on the display to the required position by pulling the setting knob out gently. Turn the setting knob until the required figure for that column appears on the display. Return the setting knob to its original position by pushing it towards the machine.

## To Change The Ink Roller

Open the front protection plate outwards. Replace the ink roller on the cradle gently.

## Printing Adjustment

Slacken the head screws on the print head and move the print head backwards or forwards. Re-tighten screws.

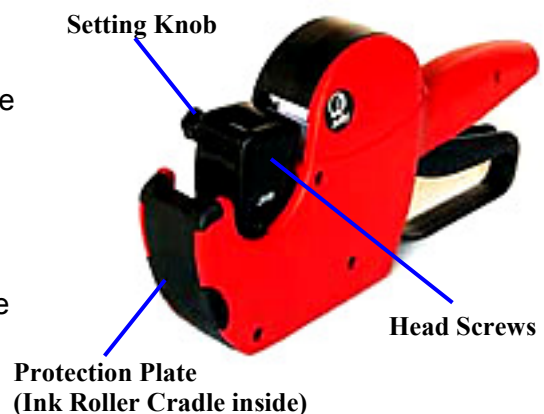

## FOR SALES AND SERVICE

12 Apollo Court, Blackburn, Victoria, 3130  
Telephone: (03) 9899 9190      Email: [info@pricemark.com.au](mailto:info@pricemark.com.au)  
Fax: (03) 9899 9180      Website: [www.pricemark.com.au](http://www.pricemark.com.au)