


Operation Manual

Models PH8, P15, C20, S6, S10

To Load The Label Roll

1. Open the baseplate by sliding the two plastic grips, one on each side of the body of the machine, towards you. The baseplate will fall open automatically.
2. Open the label roll holder by pulling it upwards slightly. Unroll approximately 20cm of label roll and insert it into the top of the machine, guiding the strip gently until it comes out of the bottom. Insert the label roll into the roll holder and close it. Make sure the labels are facing up.
3. Before closing the baseplate, make sure to leave free at least 20cm of the label roll.
4. Insert the loose end of the label roll into the slot behind the roller and push it slightly. Then pull the handle until you see that the labels are correctly feeding.

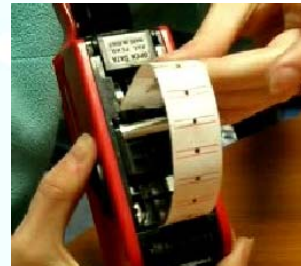

Print Setting


Move the arrow on the display to the required position by pulling the setting knob out gently. Turn the setting knob until the required figure for that column appears on the display. Return the setting knob to its original position by pushing it towards the machine.

To Change The Ink Roller

Open the front protection plate by pushing slightly on its two sides. It should hinge upwards. Use the special key and remove the old ink roller. Insert the new one into the key and place it in the hooks of the ink roller holder.

Printing Adjustment

Loosen the screw of the baseplate (under the machine) to adjust the guide plate for the label roll, then tighten the screw again.

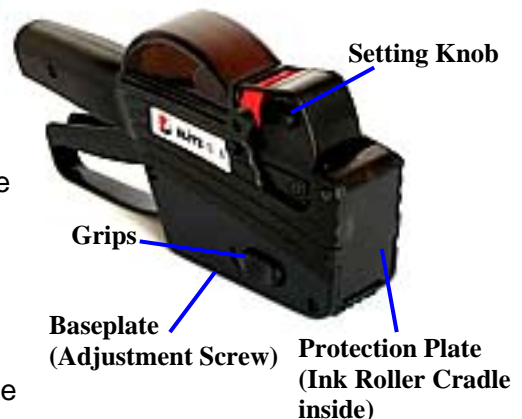

FOR SALES AND SERVICE

12 Apollo Court, Blackburn, Victoria, 3130

Telephone: (03) 9899 9190

Email: info@pricemark.com.au

Fax: (03) 9899 9180

Website: www.pricemark.com.au