

Operation Manual

Models TM17, T111

To Load The Label Roll

1. Release the grips on both sides of gun to open baseplate. Open label roll cover.
2. Straighten out 20cm of label roll and feed through inside of gun, keeping the labels facing the front. Insert label roll into roll holder and click into place.
3. Close baseplate, leaving about 15cm of label roll free. Thread tape over metal roller into the slot against the label-feed drum and, at the same time, squeeze handle several times until the machine begins feeding the labels correctly.

Print Setting

Move the arrow on the display to the required position by pulling the setting knob out gently. Turn the setting knob until the required figure for that column appears on the display. Return the setting knob to its original position by pushing it towards the machine.

To Change The Ink Roller

Squeeze together the two catches at the top of the protection plate and pull forward.


Then press together the grips at either side near the ink roller to remove the old unit. Slide a new unit into place and click into position.

Printing Adjustment

Loosen the screw of the baseplate (under the machine) to adjust the guide plate for the label roll, then tighten the screw again.

Print-Head Adjustment

Loosen screws on either side of print head and adjust accordingly.

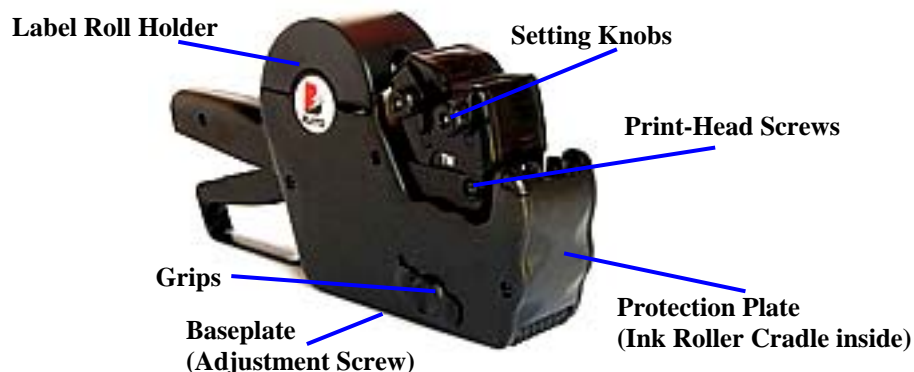

FOR SALES AND SERVICE

12 Apollo Court, Blackburn, Victoria, 3130
Telephone: (03) 9899 9190 Email: info@pricemark.com.au
Fax: (03) 9899 9180 Website: www.pricemark.com.au