



# General Price Gun & Label Maintenance

## Cleaning your Pricing Gun

To ensure minimum problems and longevity of your machine, it is recommended that you clean your machine frequently. Adhesive from labels, ink, dust, and other foreign objects can build up over time, and this can affect the function of the machine.

To clean your machine:

1. Open all baseplates so you can see through the machine.
2. Use a rag and citrus base cleaner/methylated spirits\* to clean the baseplates, tractor wheel, and anywhere else the labels come into contact with.

\*Please use correct protective garments when using chemicals.

## Trouble shooting

Before sending the machine in for repair, please check the following:

1. Check that the label roll is correctly loaded. A set of instructions usually accompany the machine, or they can be found on our website.
2. Check that the ink roller is correctly loaded and doesn't need replacing. If the print is faint, the ink roller will need to be replaced.
3. Check that the selector knob for the printbands is pushed in, and that the printbands are correctly aligned.
4. Check to see that no labels are stuck inside the machine.

## Storing Labels

Keep stock clean and dry. Store between 10-30<sup>0</sup> C, with relative humidity not more than 60%, away from direct heat and sunlight. Do not store on concrete floors.

## Ink Rollers

The life of an ink roller will depend on how many labels you use, and for how long. **DO NOT** re-ink the roller like a stamp pad; general inks disintegrate ink rollers and printbands.



## FOR SALES AND SERVICE

12 Apollo Court, Blackburn, Victoria, 3130

Telephone: (03) 9899 9190

Email: [info@pricemark.com.au](mailto:info@pricemark.com.au)

Fax: (03) 9899 9180

Website: [www.pricemark.com.au](http://www.pricemark.com.au)