

Loading Instructions for METO Pricemarking and Coding Tools.

Step 1:
Push in label roll, label side facing up




Step 2:
Slide along base plate catches until the base plate drops open




Step 3:
Pull out approx. 200mm of the label roll and feed straight through the tool




Step 4:
Close base plate, squeeze handle and hold

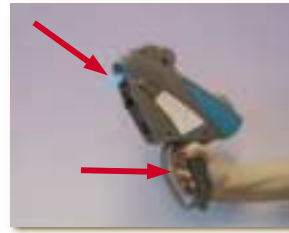


Step 5:
Feed labels through transport unit, until labels appear at the other side of the unit

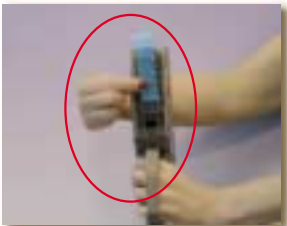

Step 6:
Squeeze handle lever repeatedly to tighten labels


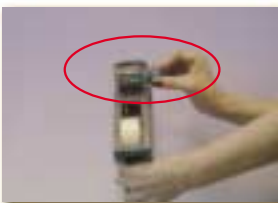


Step 7:
To change print characters, slide out the dial shaft, select changes, slide the dial shaft back into place

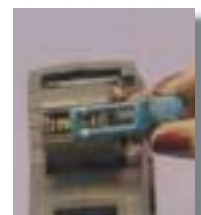

Ink Roller Replacement

1. Hold the handle in
2. With the other hand pull the Ink Roller Holder away from the tool unit until it clicks and holds. Release the handle.
3. Remove the Ink Roller holder by squeezing on both sides.
4. Discard old Ink Roller by squeezing sides.
5. Push holder through the foil pack and click new Ink Roller into place.
6. Slide holder back into place and push roller compartment back into the tool. Remove any extruding labels. The tool is now ready for use.

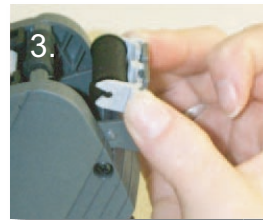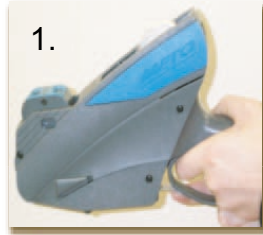

Trouble Shooting


Print not clear?

You will need to realign the printhead

Loosen side screws (on all models except the METO PL1522)

Reposition printhead by moving forwards or backwards

Retighten screws and test print

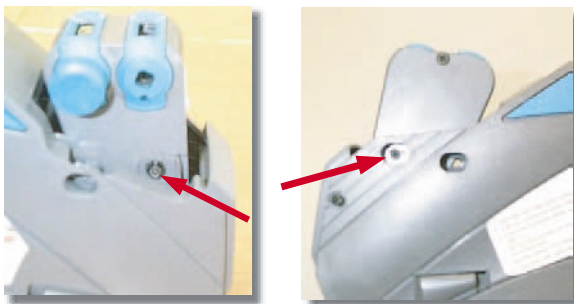

Inserting Label Rolls

Widen gun slightly at back

Make gun wide enough to fit roll in or out

Do not force roll – widen tool

Remove roll with care

